

Installation and Wiring Instructions

DA422

NITEK®

5410 Newport Drive, Suite 24
Rolling Meadows, IL 60008
PHONE (847) 259-8900
FAX (847) 259-1300
Internet: www.nitek.net

Specifications

Data Input: RS422 data
Data Output: (4) separate EIA standard RS422 signals
Size: 1 card slot
Data Rate: Up to 64K baud

UTP Category Category UTP Cable

- 1) Insert Card into a NITEK Card Cage.
- 2) Feed in a RS422 signal on the RS422 input.
- 3) Connect data devices to each of the RS422 outputs as needed.

NOTE ONLY THE TERMINAL BLOCK OR THE T568B OUTPUT CAN BE USED NOT BOTH.

PIN	T568B Jack
1	DATA 2 +
2	DATA 2 -
3	DATA 3 +
4	DATA 1 -
5	DATA 1 +
6	DATA 3 -
7	DATA 4 +
8	DATA 4 -

