


# Model VR124UTP

## UTP Video Router

# Installation and Operation Manual


## Introduction

The VR124UTP Video Router is designed to greatly extend the distances to which IP Cameras can operate. The VR124UTP Video Router consists of two units, a Control Unit and a Remote Unit. The Control Unit is installed at the NVR/ IP Equipment side and the Remote Unit at the IP Camera side of the installation.

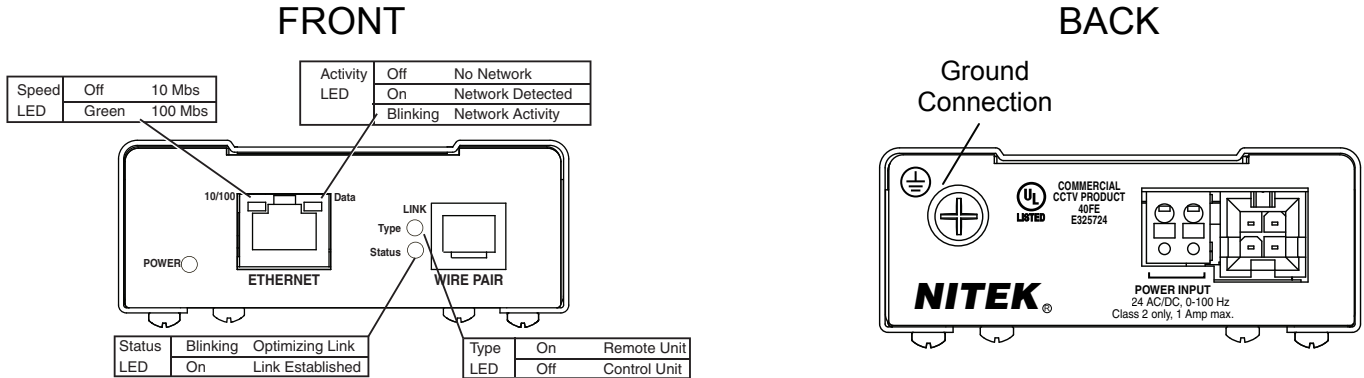

**Note:** A sticker on the bottom of each unit identifies whether it is the Control Unit or the Remote Unit.

## VR124UTP Video Router Installation Drawing

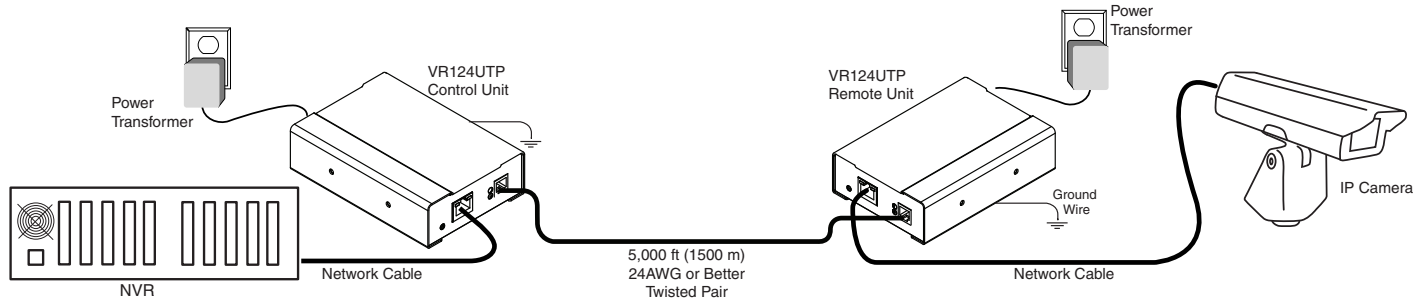

**!** The separate protective earthing terminal provided on this product shall be permanently connected to earth.

## Install Network to VR124UTP and IP Cameras

Refer to the above diagram when installing. Use best industry practices and follow all local building codes.

- 1) Connect an earth ground to each unit before making any additional connections.
- 2) Connect a network cable from the security room or IP network equipment to the CONTROL unit.
- 3) Connect a twisted pair cable between the CONTROL unit and the REMOTE Unit. Use center terminals of the RJ11connector.
- 4) Connect a network cable from the REMOTE unit's Ethernet jack to the IP camera.
- 5) Connect a Class 2 power transformer to the push in power connector of each VR124UTP units. The units require 24VAC or VDC @ 1 Amp. There is no polarity to these terminals.

## Normal Operation

When power is applied to both units the Network LED's will come on and the link status LED will blink for about 30 seconds as the link is being optimized. When the link is stable the link status LED will remain "ON". The data LED will blink with network activity.

<b>NITEK</b> <sup>®</sup>	USA	5410 Newport Drive, # 24 Rolling Meadows, IL 60008 Phone: (847) 259-8900 Fax: (847) 259-1300 E-mail: info@nitek.net WWW.NITEK.NET	EUROPE	De Schans 19-21 2a 8231 KA Lelystad Tel: +31(0)320-2300005 Fax: +31(0)320-282186 E-mail: info@nitek.nl WWW.NITEK.NL

## Troubleshooting

After completing installation, if the units are not operating properly, check each step at each unit in order.

- 1) If the Power LED is off verify the unit's power connections and verify that the power source is on an active circuit.
- 2) If the link status LED does not stop blinking, verify that the coax cable has been properly installed and make sure Control unit's link Type LED is "OFF" and that Remote unit's link Type LED is "ON".
- 3) If the Activity LED is "OFF" verify you have power to the camera and good connections to the RJ45 connectors.
- 4) If the activity LED is "ON" and the link status LED is "ON" and there is no picture, verify camera IP address and monitoring IP address are proper and refresh the monitor. Directly attach the camera through a short patch cable directly to NVR/IP network. Verify that camera and monitor program are properly functioning.